



# INDUSTRIAL 5 kHz CARRIER AMPLIFIER ICAB 5k

The lid is connected to the box through 175mm ye/gn wire.


Connection through screw terminals.  
Wire size: max 1.5 mm<sup>2</sup>.

The aluminium enclosure may have the Protective Earth potential.

The cable shields must be connected to the housing inside the cable gland.

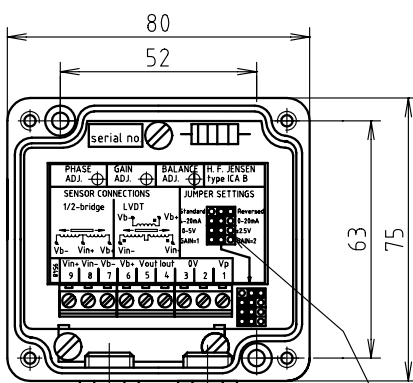Cable assembly

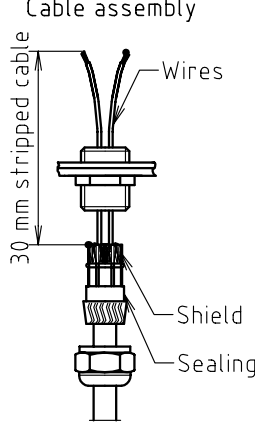


PG 7  
Cable size: 3-6.5 mm

Standard 4-20mA 0-5V  
Reversed 0-20mA ±2.5V

JUMPER SETTINGS

"LT": Only customer specified products.

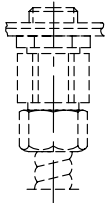


PG7 Combi cable gland.  
Cable size: 4-7mm. Cable surrounded by Ø10mm metalplast tube. Bending radius: min. 50mm. Cable shield must be connected with internal wafer.

External Connections sign placed inside lid.

External Connections		
A. 4-20mA 2-wire	B. 0-20mA BA. 4-20mA 3-wire	C. 0-5V D. +/-2.5V 4-wire
Vout Iout 0V Vp   5   4   3   2   1	Vout Iout 0V Vp   5   4   3   2   1	Vout Iout 0V Vp   5   4   3   2   1

PCB Block diagram and Connection setups

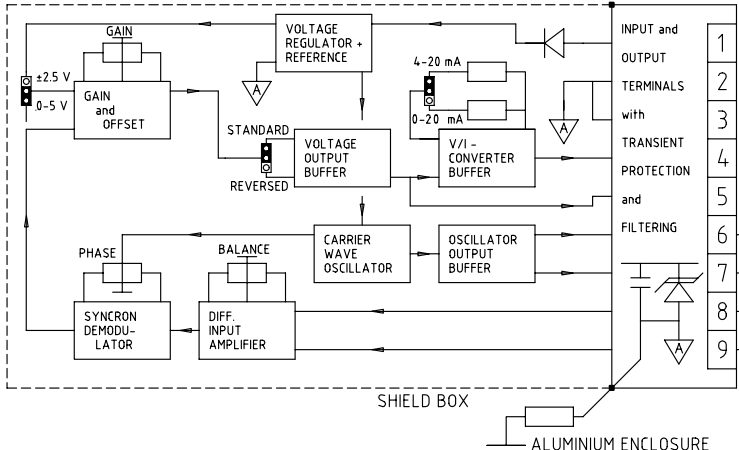

INPUT and OUTPUT TERMINALS with TRANSIENT PROTECTION and FILTERING

1 2 3 4 5 6 7 8 9


+Vb  
-Vb  
-Vin  
+Vin

SENSOR

SHIELD BOX

ALUMINIUM ENCLOSURE

2-wire 4-20 mA load related to supply voltage

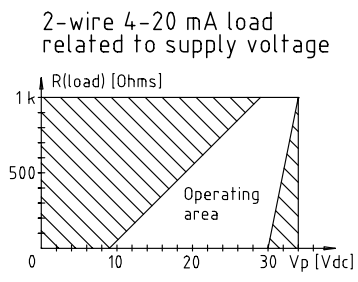

## DESCRIPTION

The ICAB industrial carrier wave amplifier is designed to interface the H. F. Jensen line of sensors or similar products based on the inductive, capacitive or resistive, half- or full bridge measuring principle. The electronics includes an excitation oscillator, a true differential input amplifier, a phase-sensitive demodulator, a low-pass filter and output stages. It will function over a wide range of supply voltage with no change in output. The product offers various output signals configured by the user through the jumpers on the PCB. Layout, filtered and transient protected connections plus a metal shieldbox covering all sensitive components ensures high electromagnetic compatibility. The EMC is further enhanced through shielded cable glands in the outer aluminium enclosure. This combination again features a robust and IP65 tight unit compatible with most industrial environments.

2005-01-21

H F Jensen A/S  
Emdrupvej 70, DK-2400 Kbh NV  
www.hfjensen.dk

Tel: +45 39 53 60 40  
Fax: +45 39 53 60 48  
info@hfjensen.dk

7.2.4.1

**H F JENSEN**  
SENSOR TECHNOLOGY

## SPECIFICATIONS

<b>Power requirement</b>	12-30 V <sub>DC</sub> , 4 mA <sub>DC</sub> + output signal current.
<b>Supply voltage rejection</b>	min. 86 dB between 12 and 30 V <sub>DC</sub> .
<b>Sensor excitation</b>	1-2 V <sub>RMS</sub> , max 2 mA <sub>RMS</sub> , 5 kHz.
<b>Output signals and load</b> - A - B - BA - C - D	Selected by jumpers placed beside the terminals. 4-20 mA <sub>DC</sub> , 2-wire, R <sub>L</sub> : see diagram, C <sub>L</sub> < 1μF. 0-20 mA <sub>DC</sub> , 3-wire, R <sub>L</sub> < 700 Ω , C <sub>L</sub> < 1μF. 4-20 mA <sub>DC</sub> , 3-wire, R <sub>L</sub> < 700 Ω , C <sub>L</sub> < 1μF. 0-5 V <sub>DC</sub> , 4-wire, R <sub>L</sub> > 5 kΩ. C <sub>L</sub> < 1μF. ± 2.5 V <sub>DC</sub> , 4-wire, R <sub>L</sub> > 20 kΩ. C <sub>L</sub> < 1μF.
<b>Load resistance rejection</b>	min. 60 dB for max ΔR <sub>L</sub> .
<b>Response time (0-100 %)</b>	6 msec.
<b>Output signal ripple</b>	< 0.02 % p-p of FSO.
<b>Polarity S/R</b>	Selected by jumper placed beside the terminals.
<b>Non-linearity</b>	< 0.01 %.
<b>GAIN adjustment</b>	± 10 % of signal output.
<b>PHASE adjustment</b>	0-180 degrees.
<b>BALANCE adjustment</b>	± 10 % of FSO.
<b>Temperature range</b>	-25 °C to +85 °C.
<b>Temperature coefficient</b>	< 0.01 %/°C of FSO.
<b>Cable length</b>	max. 100 m between sensor and amplifier.
<b>Environmental conditions</b> - vibration - shock - electromagnetic immunity - electromagnetic emission	According to IEC 68-2-6 (10-150 Hz, 0.35 mm/5g). According to IEC 68-2-27 (1000 g half sine, 1 msec). According to EN 50082-2 (generic industrial standard) According to EN 50081-2 (generic industrial standard)
<b>Materials and protection class</b>	Box of AISi12, IP65 - Cable glands of brass, IP67.
<b>Weight</b>	250 gram.

## INSTALLATION

If the ICAB is delivered together with a H. F. Jensen sensor the measuring system is factory calibrated with a small compensation network marked with the serial number of the sensor and followed by a "Certificate of Accuracy". The calibration should be checked after every new installation or service where parts have been changed. Extension cable between sensor and amplifier might change calibration. Connect the sensor and supply/output wires to the ICAB according to the connection diagram and check the output configuration. The total measuring system is designed to ensure high electromagnetic compatibility. To create the necessary protection, shielded cables must be used with shields connected inside the cable glands of the housing. Make sure the lid and cable gland nuts are tightened after connection.

## ADJUSTMENT

Let sensor be unactivated or placed in its ZERO-position. BALANCE to the 50 % output signal value (0 V<sub>DC</sub> in the D-configuration). Activate sensor to maximum state and adjust to largest output with PHASE. Adjust to 100 % output signal value with GAIN. Check output with sensor in minimum state and repeat if necessary. The output polarity can be changed with a jumper.

## ORDERING INFORMATION

ICAB 5k  $\begin{matrix} \times & \times \\ | & | \\ \text{---} & \text{---} \\ | & | \\ \text{---} & \text{---} \end{matrix}$  Input signal [mV/V].  
Output signal configuration: A/B/BA/C/D (please see SPECIFICATIONS).